


# Nova Urban Spares

## 51/55000 Standard Type



BS EN ISO 9001:2008  
FM 01206

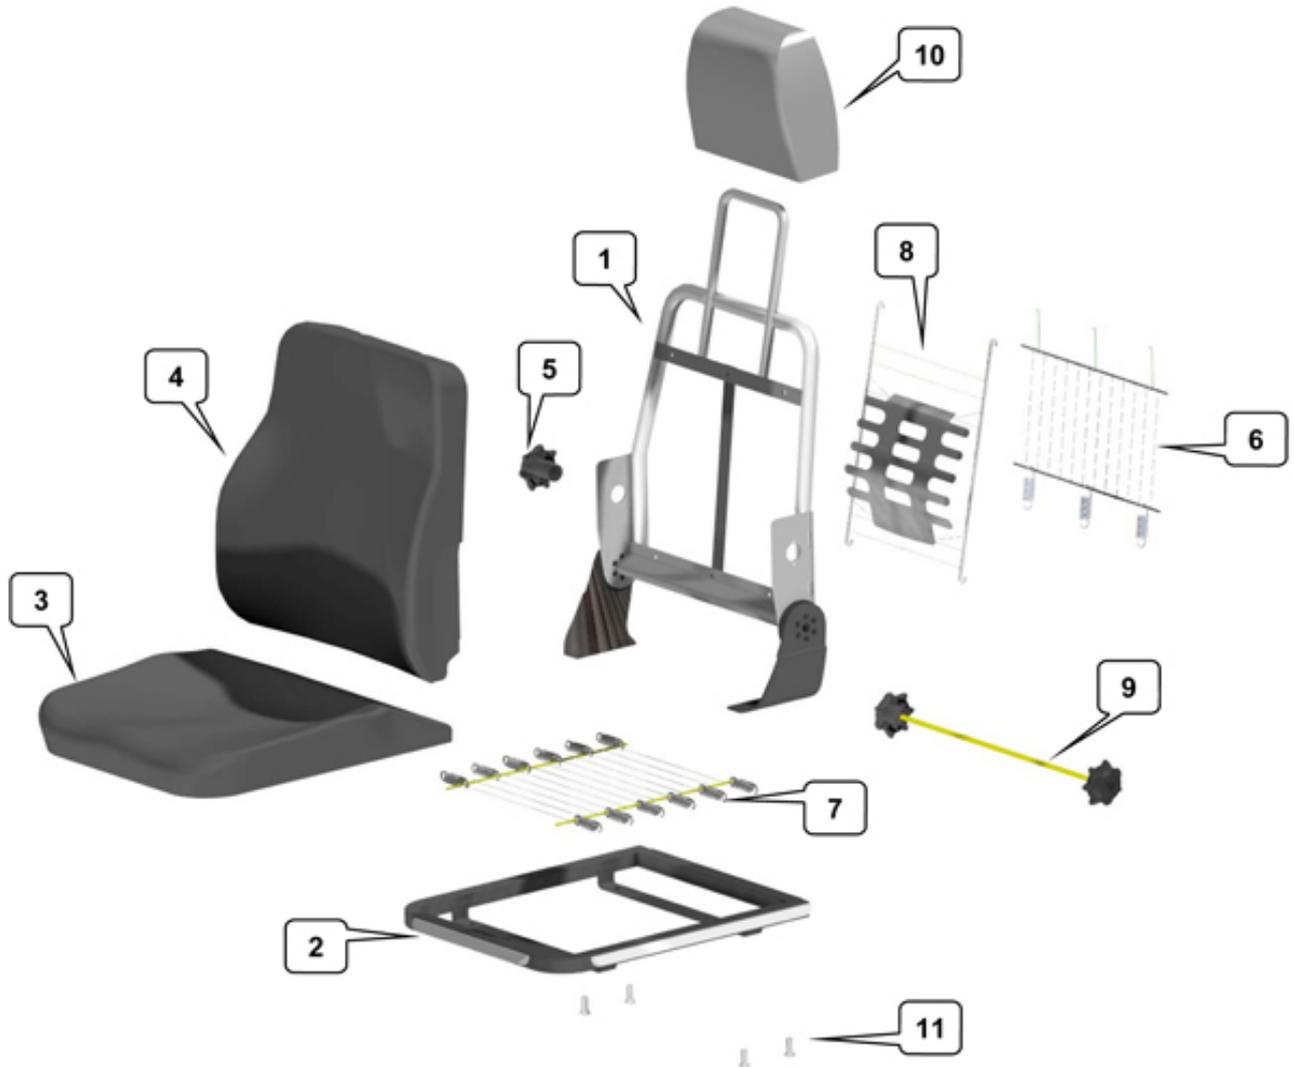

NO.	CDS PART-No.	CBP PART-No.	DESCRIPTION	NOTES
1	51300		SQUAB FRAME (NO HEADREST)	COMES COMPLETE WITH ITEM 6
1	51300LS		SQUAB FRAME (NO HEADREST)	COMES COMPLETE WITH ITEM 8
1	55300		SQUAB FRAME (INTEGRAL HEADREST)	COMES COMPLETE WITH ITEM 6
1	55300LS		SQUAB FRAME (INTEGRAL HEADREST)	COMES COMPLETE WITH ITEM 8
2	51400		CUSHION FRAME (URBAN)	COMPLETE WITH SPRUNG MAT
3	31833	60.094	CUSHION FOAM (URBAN)	
4	31831	60.438	SQUAB FOAM	
5	33359	60.605	LUMBAR ADJUST KNOB + CAP	
6	33861		SQUAB MAT	
7	33861K	60.604	CUSHION MAT ASSY	MAT + SPRINGS
8	33320	60.075	LUMBAR ASSY	
9	33724K	60.159	RECLINE ADJUST ASSY KIT	2 x KNOB, CAP & SCREW + BAR
10	33826	60.078	HEADREST FOAM	
11	37958	60.102	M10x20 BUTTON HEAD BOLT	
	31890	60.103	CUSHION COVER	PLEASE SPECIFY TRIM
	31891	60.104	SQUAB COVER	PLEASE SPECIFY TRIM

<b>NOVA URBAN Options / PART NUMBERS</b>	<b>51000</b>	<b>51100</b>	<b>52000</b>	<b>52100</b>	<b>55000</b>	<b>55100</b>	<b>55500*</b>
LOW-BACK	•	•	•	•			
NARROW FRAME							
STANDARD HEADREST			•	•			
INTEGRAL HEADREST					•	•	•
L/H ARMREST	AL						
R/H ARMREST	AR						
HEATED	H	H	H	H	H	H	H
LUMBAR SUPPORT	LS						
M3 SEATBELT							•
R/H RECLINE		•		•		•	