

Recline Bar Fitment Nova Urban Seats

June 2017

CHAPMAN


EST. 1901




Ensure this key hole is aligned at the same direction on both sides of the seat before sliding the bar through.

To align simply turn one side with the square bar inserted in that side only.

If these are not aligned, the gears won't function correctly and won't have the full range of movement.

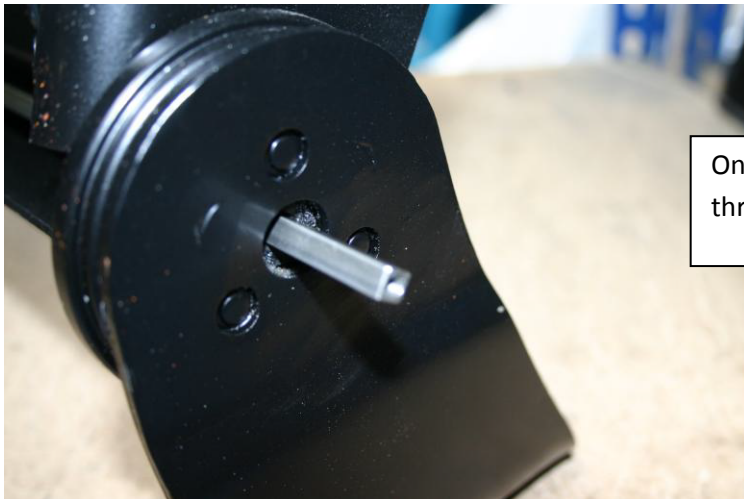

Once aligned the bar can be pushed through the frame.

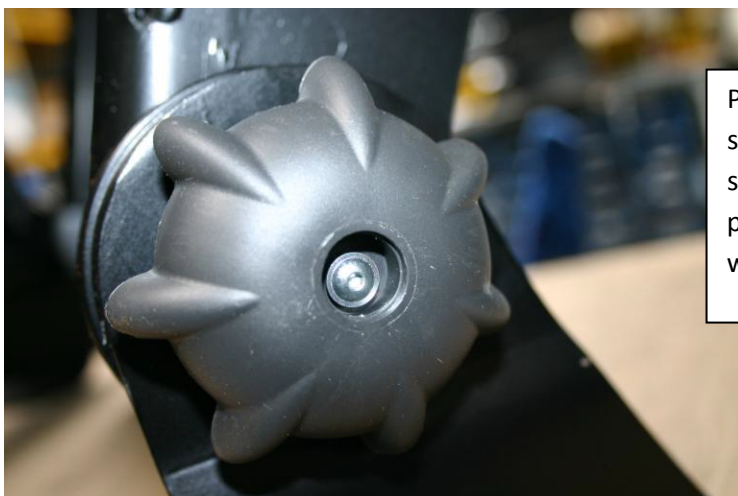

Push the plastic knob onto the square bar and fix with the screw as supplied. The cap can then be pushed into the hole and secured with a rubber mallet.

IF YOU REQUIRE FURTHER ASSISTANCE, PLEASE CALL CHAPMANS ON 0845 838 2305