


CHAPMAN
EST. 1901

58 Pleasant Street, Lyng Industrial Estate
West Bromwich B70 7DP
T: 0845 838 2305 F: 0845 838 2909
www.chapmanseating.com

DRIVER SEAT INSTRUCTIONS

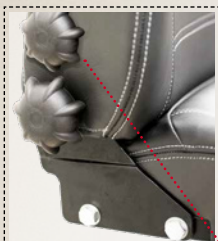

LOWER BACK ADJUSTMENT (where present)

Turn the upper wheel
situated on the right-
hand side of the seat.

DO NOT OVER TIGHTEN

SEAT BACK ANGLE ADJUSTMENT

To adjust the angle of
the back of the seat, turn
the adjuster wheel on
either side of the seat.
There may be one or two
wheels depending on the
seat variant.

**IF ADJUSTMENT IS
STIFF, CHECK GEAR
ALIGNMENT USING
THE INSTRUCTION
NOTES FROM THE
DOWNLOAD SECTION
OF THE WEBSITE**
[www.chapmanseating.com
/downloads](http://www.chapmanseating.com/downloads)



SEAT IDENTITY NO.

Use this number as
reference for spares or
maintenance details.

**QUOTE THIS NUMBER
WHEN CONTACTING US**



SEAT POSITION ADJUSTMENT

Lift this lever to adjust the seat
forwards and backwards. Make
sure the lever locks back in place.

DO NOT REST FEET ON BAR



SEAT HEIGHT ADJUSTMENT

Use these handles for adjustment
up and down. The front and rear
can be adjusted independently.

**DO NOT SIT ON THE SEAT WHILST
ADJUSTING UP. THIS CAN CAUSE
DAMAGE TO THE ADJUSTER
HANDLES.**

DRIVER SEAT CARE & MAINTENANCE

NATURAL LEATHER COVERS

can be wiped clean with a cloth and a mild soapy solution; alternatively use a baby wipe or a specialist leather wipe.

MOQUETTE COVERS

should be vacuumed on a weekly basis with an industrial vacuum cleaner if possible. Only recommended upholstery shampoos should be used and always test a small inconspicuous part of the fabric first. Steaming of the moquette can lift dirt and restore the appearance of the material.

E-LEATHER COVERS


should be cleaned regularly with a damp cloth to maintain the life and appearance of the product. For more thorough cleaning you should use AUTO GLYM 56 as shown below and opposite.

PRODUCT LIST:

- Autoglym 56 Express
Wash diluted at 25:1
- Autoglym Interior Sponge
- Autoglym Aqua Dry

GREASING HEIGHT ADJUSTER

Periodically add an application of light grease to the guideways and adjusting spindle as required to ensure smooth operation of the height adjuster. Please note that adjusting the height UP with drivers weight on the seat can cause damage to the adjusting handles.

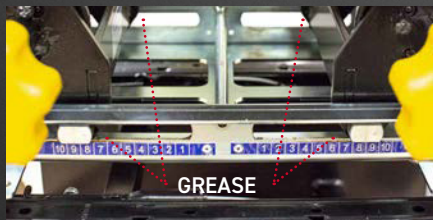

1. Apply 56 Express Wash to a damp Interior Sponge



2. Gently Agitate using the Interior Sponge



3. Remove water / soap residue with a clean, damp Aqua Dry

FURTHER DETAILS

For further details on seat servicing and spares information visit the web site (www.chapmandriverseating.com) or call Chapman Driver Seating on 0845 838 2305. Please quote the serial number from the relevant component when calling.



© Chapman Driver Seating SLV3

CHAPMAN
EST. 1901